

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

| Item | When to initialize | Reference |
|--------------------------------|---|-----------|
| Maintenance data (U.S.A. only) | After the maintenance is performed | P. 386 |
| Tire pressure warning system | <ul style="list-style-type: none">• When rotating the tires with differing front and rear tire inflation pressures.• When changing the tire inflation pressure by changing traveling speed.• When changing the tire size. | P. 413 |

